 
 



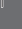 
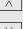 


 


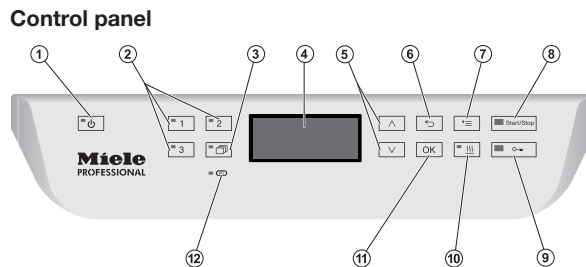

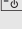


Operating Instructions for Miele PG 8583 glasswasher.

Overview of control panel:

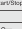Guide to the machine



- ① **Button  (On/Off)**
For switching the machine on and off.
- ② **Buttons ,  and **
Program selection buttons.
Can be configured.
- ③ **Button  (program list)**
For accessing the list of all programs.
- ④ **Display**
User interface and program sequence display.
- ⑤ **Arrow buttons  and **
For navigating within the user interface.
- ⑥ **Button  (cancel)**
For canceling a process in the user interface
(not for canceling programs)
- ⑦ **Button  (settings)**
For accessing the system settings menu.
- ⑧ **Button  Start/Stop**
For starting or canceling a program.
- ⑨ **Button  (door release)**
For opening the door before or after a program.
- ⑩ **Button  (drying assistance)**
For switching Drying assistance on and off.
- ⑪ **Button  OK**
For selecting or confirming entries in the user interface.
- ⑫ ** PC / Optical interface**
Used by Miele service technicians to run diagnostic checks and
can also be used to update programming data in the future.

1. To Power the washer on lightly press the “On/Off” button, #1.
2. Open the door by gently pulling on the door handle.
3. Load glassware to be washed in the provided Miele accessory trays. Do not use other trays in the washer that are not approved for use.
4. Close the door, it will not fully close but will stop with around a 2.5cm gap. This is normal. The lock button, #9 will illuminate
5. Select a wash cycle using icons #2. If requiring a specialized cycle use icon #3 from the diagram above to select further wash cycle options. .
6. Press the start/stop button, #8. The door will fully close and the wash cycle will start.
7. Once a cycle finishes the door will automatically open. Gently push down on the retaining latch to release the door fully.
8. Unload washer and return door to close position.

If the washer detects a fault during the run it will interrupt the run and display an error code. The unit can only be reset by a Science technician. Contact Bob or Joe if the machine faults.